


A range of standard sized conductive & non-conductive connector gaskets to suit the popular round pattern connectors and miniature 'D' connectors.

P&P Technology are always happy to provide guidance on the best product for your application.

### DC Series - Connector gaskets

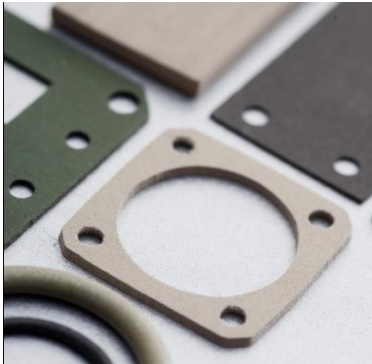

The DC Series comprises waveguide and connector gaskets to MIL-C-81511, MIL-C-5015, MIL-C-38999 & MIL-C-26482 plus industry standard configurations including BN, BNC, D, WG, WR, IEC, UG, AN and special profiles cut to the customers specification.

#### Advantages -

- Supplied ready to fit
- Wide range of material options
- Cost effective solution
- Excellent EMC seal
- Excellent environmental seal
- Custom shapes and sizes to order

#### Applications

- Connectors

#### Points to Note -

- Care should be taken when fitting over a threaded connector body
- Use of conductive adhesives will tend to adversely affect the sealing characteristics

